



Aerator insert installation

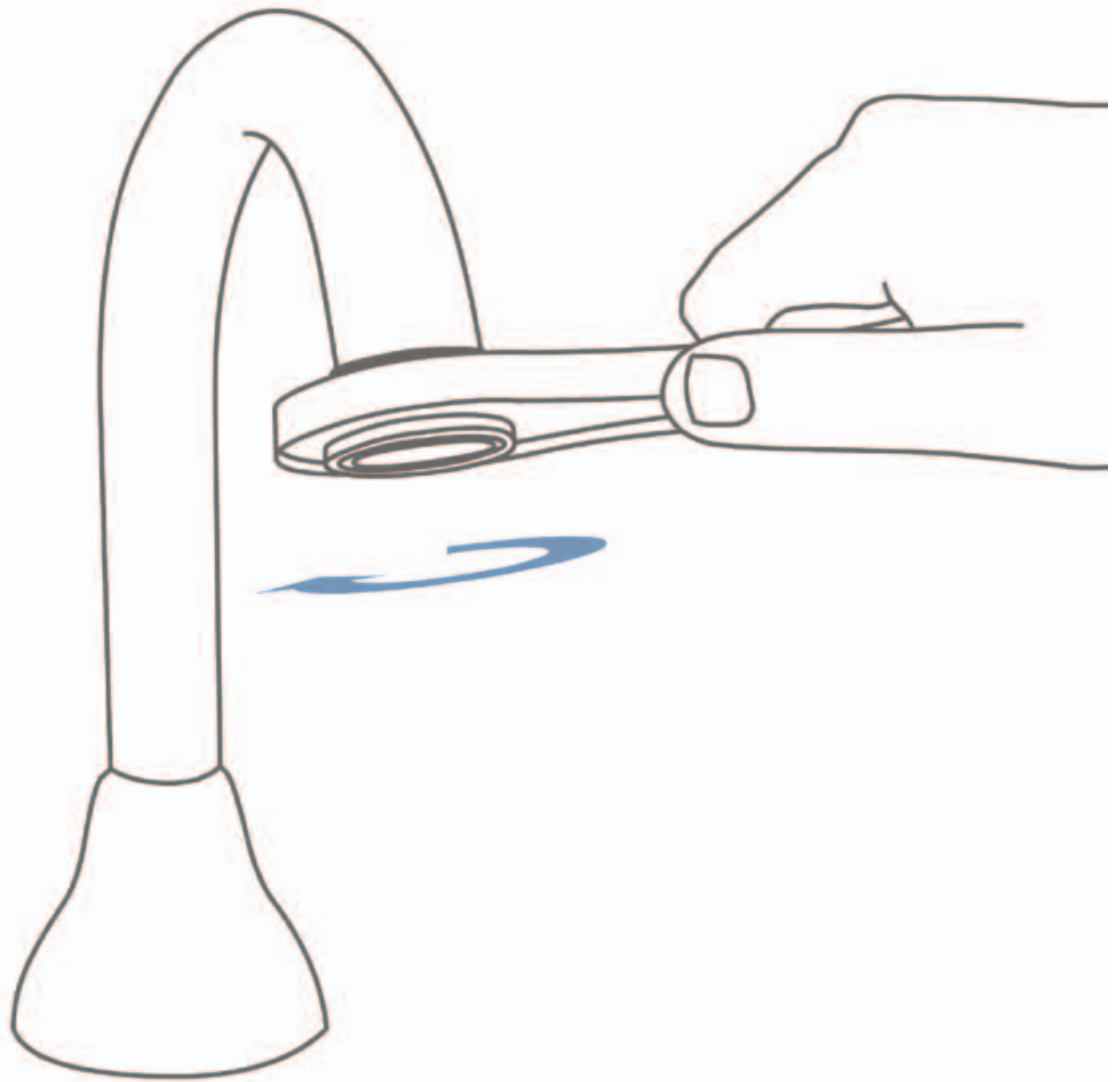

STEP 1

Unscrew the existing aerator from the end of the spout using a spanner. Remove the old aerator insert and sealing washer.


Aerator insert installation

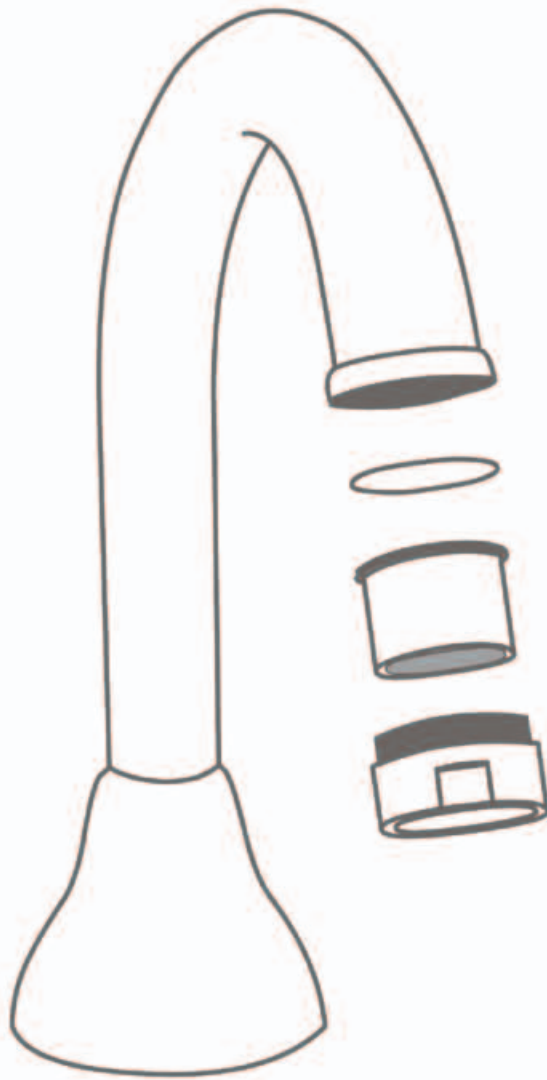

STEP 2

Place the new aerator insert into the existing case and place the sealing washer over the end of the aerator.

Aerator insert installation

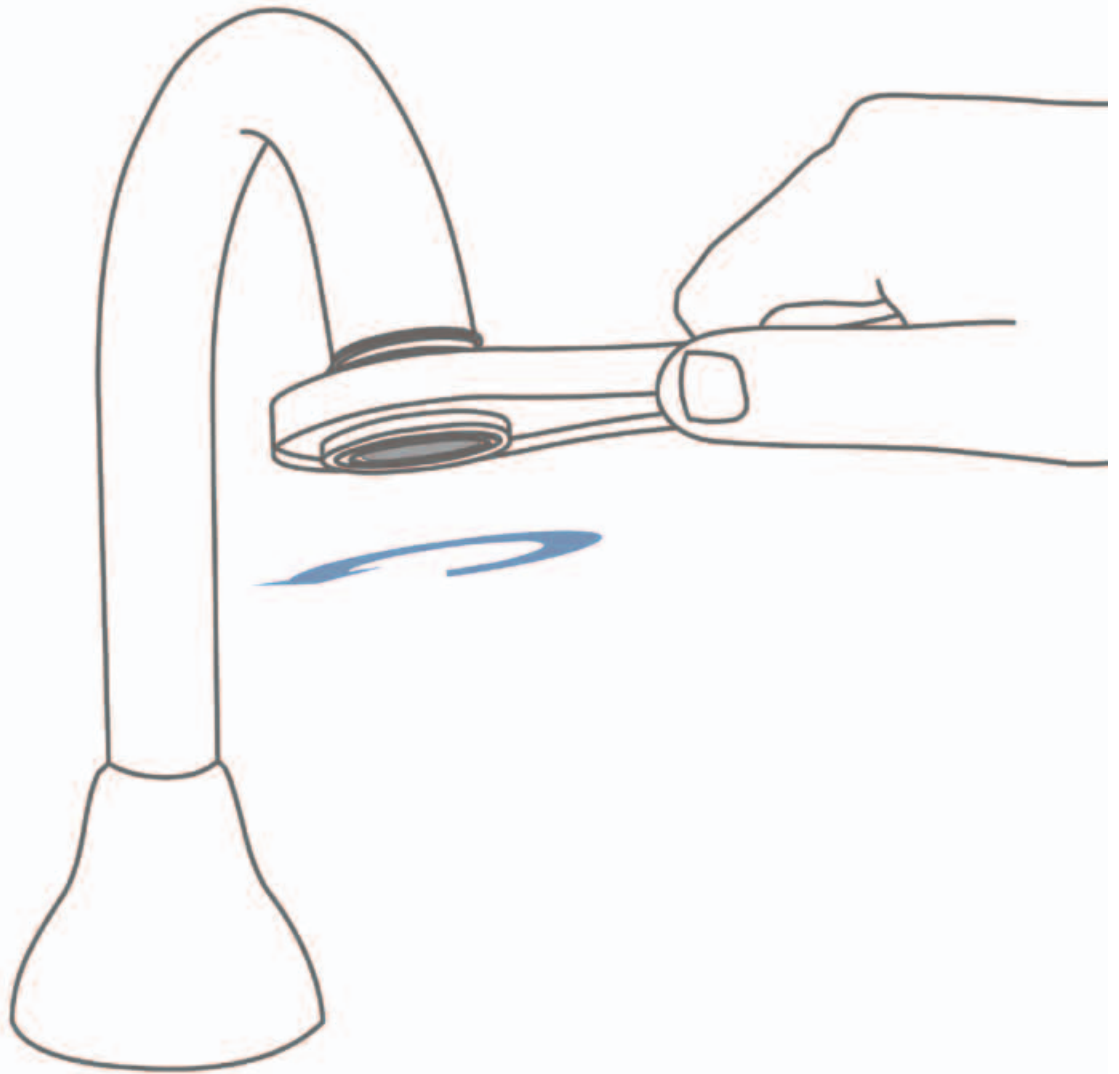

STEP 3

Ensure the threads on the aerator case and spout are clean. Screw the case back onto the spout and carefully tighten with spanner.