



Installing an inline flow controller

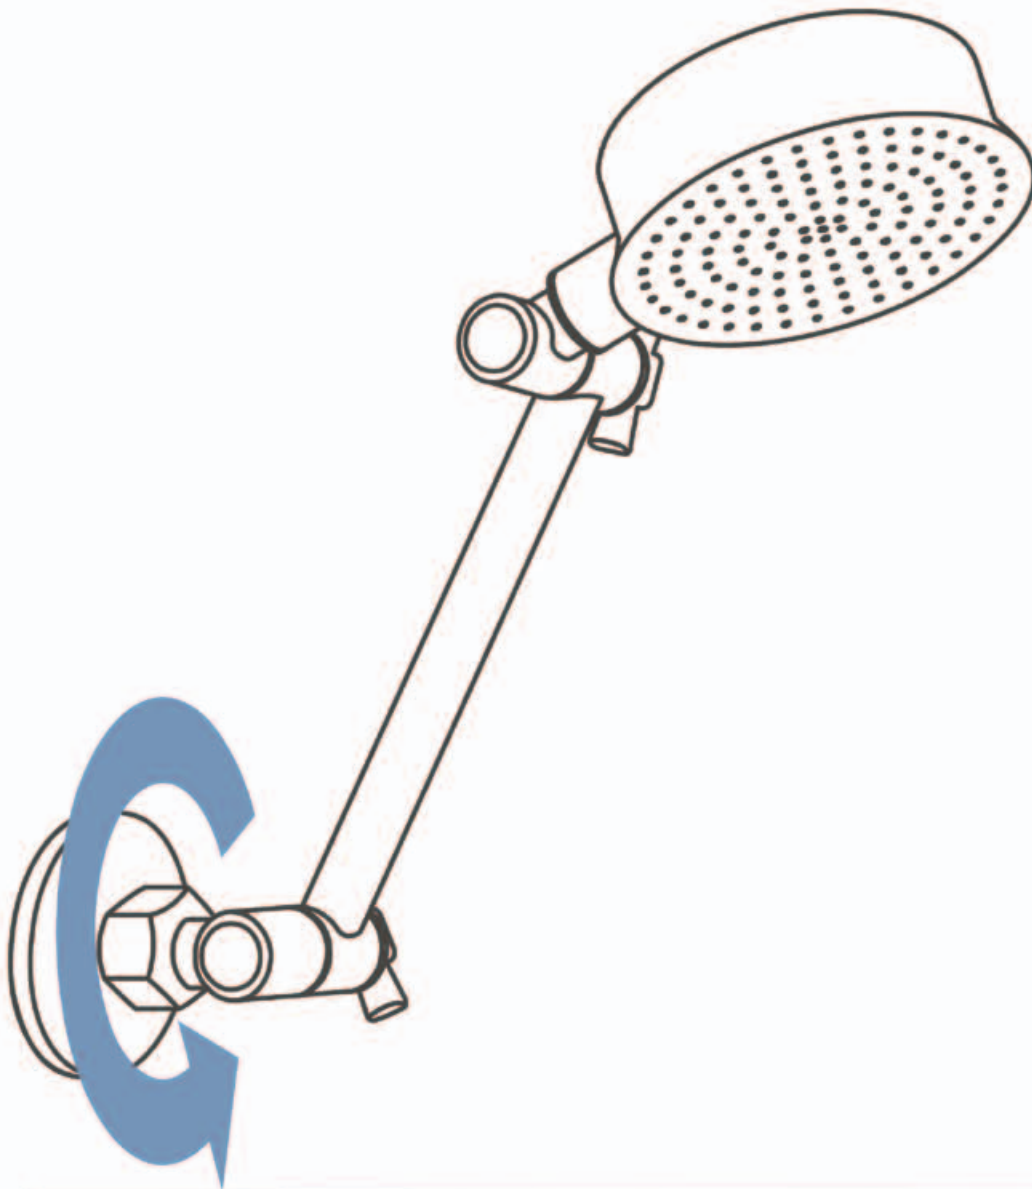

STEP 1

Unscrew the existing showerhead anti-clockwise.


Installing an inline flow controller

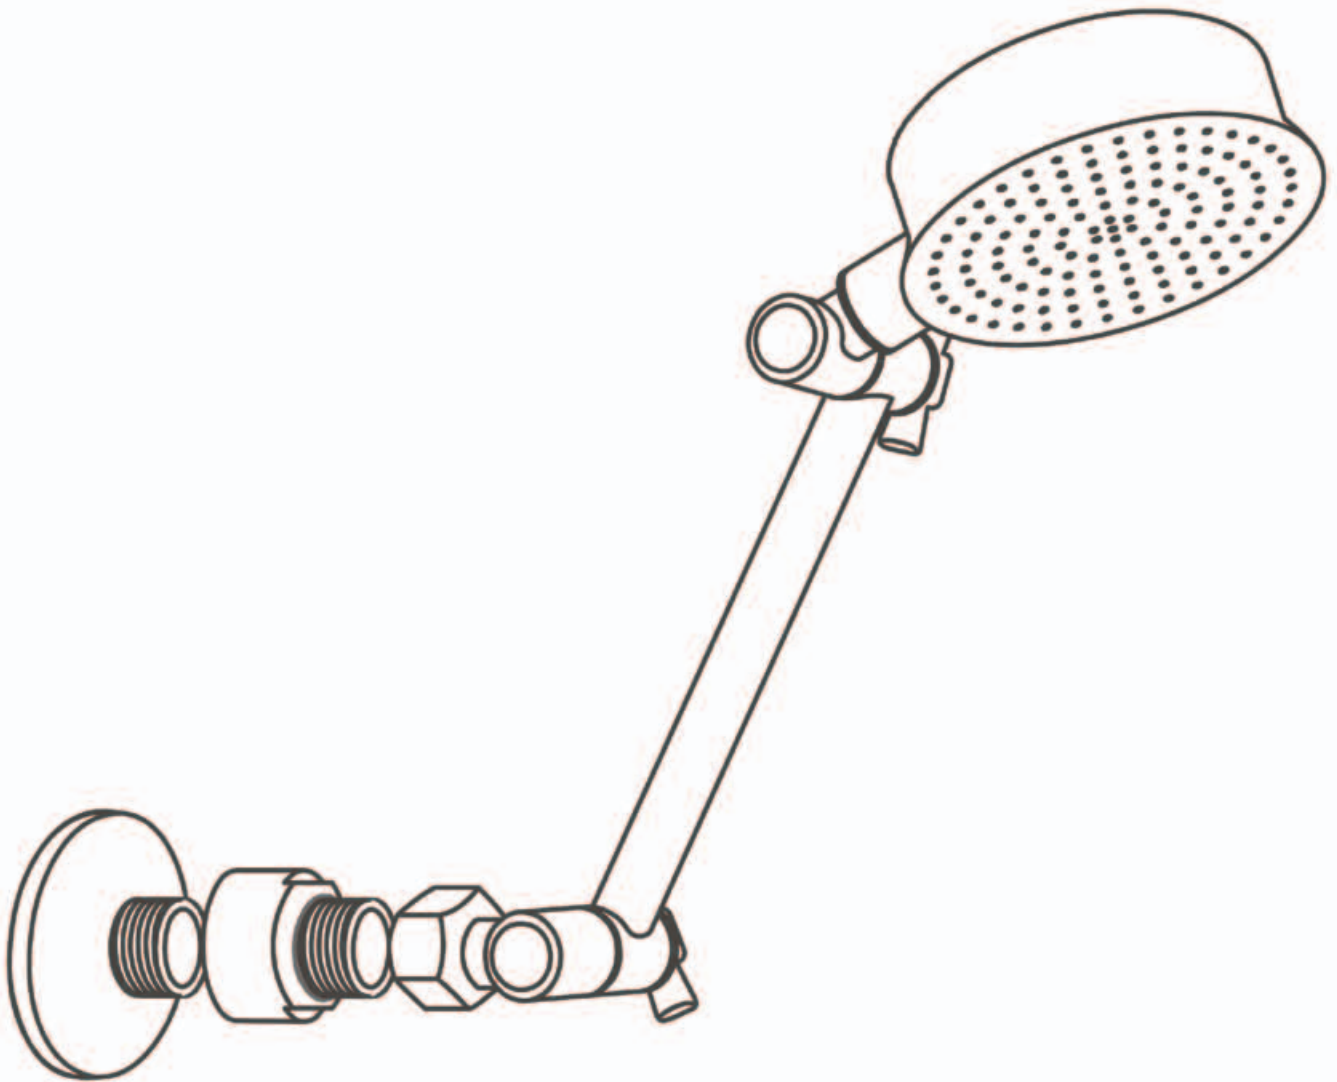

STEP 2

Screw the inline flow controller onto the water outlet at the wall.

Installing an inline flow controller

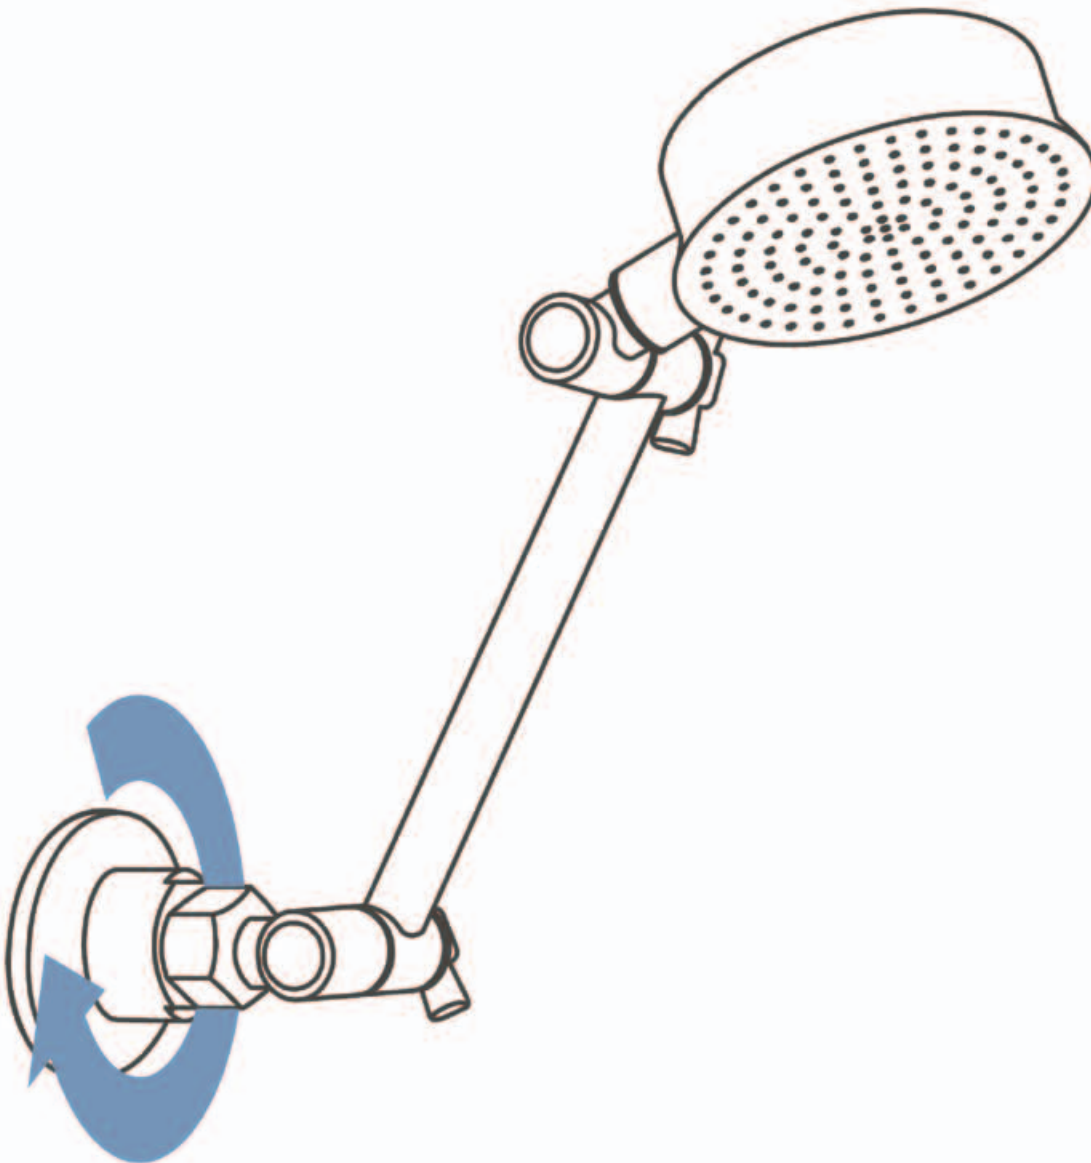

STEP 3

Screw the shower inlet onto the inline flow controller ensuring it seals against the o-ring.